




Safe-T Screens and Barriers for Workplaces

# SAFE SCREENS AND BARRIERS FOR WORKPLACES

#### PROTECT YOUR TEAM FROM COUGHS AND SNEEZES WITH SAFE-T SCREENS

All panel options feature naturally anti-microbial materials that can be easily and repeatedly disinfected without damaging the screens.

#### ■ CLEAR PLEXIGLASS

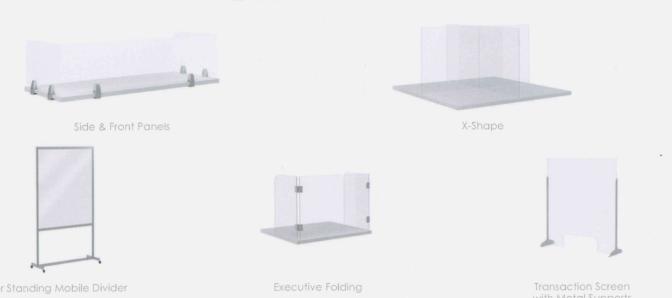


#### ■ FROSTED ACRYLIC



Side & Front Panels





Sliding Desk Divider

LOW-FLAMMABLE POLYCARBONATE MATERIAL IS AVAILABLE UPON REQUEST



DESK MOUNTED

Protect people working in close proximity by adding screens permanently attached to the worksurfaces. Removable C-clamp with adjustable hand screw under table can be used on the edges.



### CUBICLE PANEL MOUNTED

Safeguard your team by extending the height of existing cubicles with Clear Plexiglass or Frosted Acrylic screens mounted on top of panels. Universal brackets fit all panel sizes without any damage.



### DESK DIVIDER

Separate individual workstations in open plan office with desking systems. The desk divider slots into place and grips the worksurface creating a wellness barrier, privacy protection and sound reduction.



FREE STANDING

Create a separation barrier on counters, desks and worksurfaces with free-standing divider panels. No installation required.



X-SHAPE

Protect employees, students, and teachers in breakrooms, cafeterias, conference areas, high traffic areas, and places where people congregate. Easy assembly – simply remove plastic film and lock pieces together. Available for 36"-60" round or square tables as well as 24" x 72" and 30" x 72".





## EXECUTIVE FOLDING


Help protect your employees, customers, and guests from viruses while engaging in face-to-face interactions. Clear plexiglass allows for crystal clear visibility without impeding effective communication. The screen can be easily placed on any flat surface, moved around, or folded when not in use.



FLOOR STANDING

Prevent viruses and bacteria from spreading in open space areas with clear room dividers. When placed between workstations, meeting areas, or breakroom tables, people can feel safer and more protected. The 75" high floorstanding dividers are 34" or 43" wide. They are equipped with locking casters and can be easily moved between different areas.



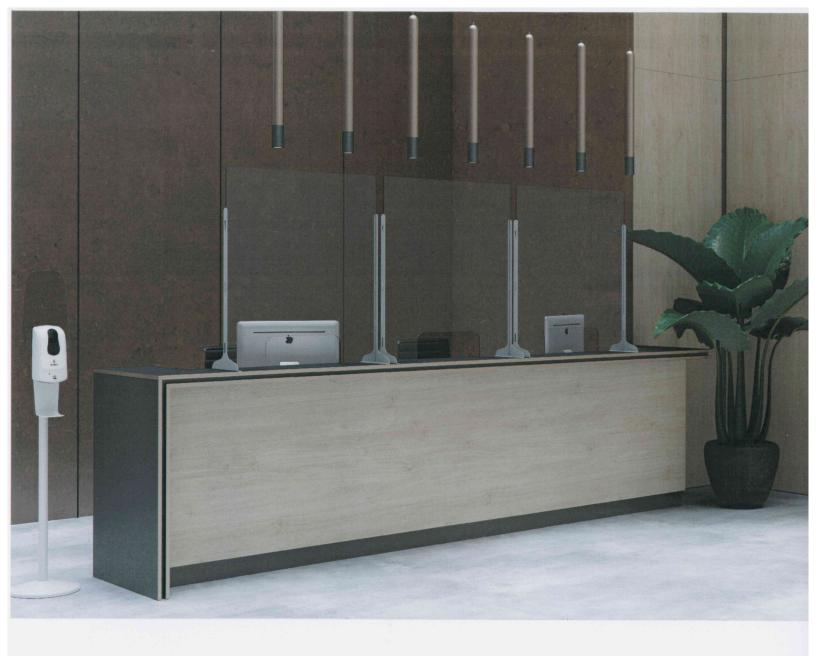

# TRANSACTION SCREEN

A free-standing transaction screen is suitable for a myriad of solutions, from reception desks, meeting areas, to POS stations, and can be easily added to any flat surface. The upright metal brackets support 36" x 40" plexiglass and provide a sleek and simplistic design with maximum stability. 6" x 18" pass-through window allows papers and small items to pass from person to person.

# FRONT AND SIDE PANELS SPECIFICATIONS

■ Front Panels: 48"L, 60"L or 72"L

■ Side Panels: 22"L or 28"L

■ Height: 14"H or 24"H

■ Custom Sizes

■ Compatible with 1" – 1.25" tops

#### ATTACHMENT OPTIONS



#### STANDARD CLAMP

Securely attach screens to a worksurface with screws to avoid movement and repositioning.



#### TMB G2

Add wellness screens to existing furniture without causing permanent damage. Screens with TMB G2 brackets can be easily moved and reconfigured by users in self-directed spaces to insure autonomy and protection. Add heavy-duty double-sided tape to temporarily affix to a flat surface.



#### C-CLAMP

Easily removable C-Clamp attaches with an adjustable hand-screw under the table and keeps the screens secure around table edges. Compatible with 1" - 1.25" thick work surfaces.



#### UNIVERSAL U-BRACKET

Extend the height of any cubicle panel with an expandable universal U-Bracket. Small size fits 1.875" – 2.75" wide panels. Large size fits 2.75" – 4.75" wide panels.



#### FREE STANDING FOOT

With a free-standing foot, the screen can be easily moved anywhere in the workplace. Add a heavy-duty double-sided tape to temporarily attach the screen to a flat surface. Attach screens to a metal surface with optional earth magnets inset into the foot for a level connection.



### CLEAR PLEXIGLASS OR POLYCARBONATE



Clear

# FROSTED ACRYLIC



Frosted

#### PET

#### STOCK COLOR



Gray

#### OPTIONAL COLORS\*



\*Extended lead time and additional charges apply.

#### CLEANING & CARE

# CLEAR PLEXIGLASS, POLYCARBONATE, ACRYLIC, AND FROSTED ACRYLIC

Clear Plexiglass, Acrylic, and Frosted Acrylic are durable materials that require minimal maintenance. Regular care should consist of normal wipe-cleaning with a soft rag or towel. Pay special attention to avoid scratching the surface.

#### CAUTION

Using window cleaner, ammonia products, bleach, or other chemical sprays on Acrylic, Plexiglas or Lucite can cause scratches or damages. If there is any adhesive or sticky substance on the surface, DO NOT use any solvents.

Clean with a nonabrasive acrylic cleaner, such as Brillianize or Novus No. 1. It leaves a lustrous shine that resists fogging, repels dust, and eliminates static. Novus also offers a Fine Scratch Remover (Novus #2) that removes fine scratches, haziness, and abrasions from most plastics. For heavy scratches, use the Heavy Scratch Remover (Novus #3) which removes heavy scratches and abrasions from most acrylic surfaces. For an on-hand alternative, a solution of mild dish soap and water works well too.

#### PET SCREENS

PET can be safely cleaned with most non-abrasive cleaners, like:

- Disinfecting wipes
- Disinfecting sprays
- Mild soap
- Bleach solution: 1/3 cup of bleach per 1 gallon of water

Follow the bleach manufacturer's instructions for application and proper ventilation. Never mix household bleach with ammonia or any other cleanser.

Follow manufacturer's instructions for application and proper ventilation. Never mix household bleach with ammonia or any other cleanser

